

Amazon Echo

What do the Light Colours mean?



By Gary Eady, Access Technology Trainer at Sight For Surrey

Do you know what your Echo device wants to tell you when it shows up certain lights? Here are some of the descriptions that you should become familiar with:

Solid Blue with spinning Cyan lights

This means that the device is starting up!

All Lights Off

This means that the device is on and is waiting for your request or instruction.

Solid Blue with Cyan Pointing in Direction of Person Speaking

This means that Alexa is busy processing your request.

Alternating Solid Blue and Cyan

This means that the device is responding.

Orange Light Spinning Clockwise

This means that the device is connecting to your Wi-fi network.

Solid Red Light

This means that you have turned off the microphones on your device. Press the Mute button on top of the device to turn the microphones back on.

White Light

This means that you are in the process of adjusting the volume on your device.

Continuous Oscillating Violet Light

This means that an error occurred during Wi-Fi setup.

Spinning Blue Light that Ends in a Solid Purple Light

This means that Do Not Disturb is enabled.

Single flash of purple light after an interaction with Alexa

This means that Do Not Disturb is active.

Pulsing Yellow Light

This means that a Message or Notification is waiting for you. To check your messages, say "Alexa, play my messages", or "Alexa, what did I miss?".

Pulsing Green Light

This means that you are receiving a call or Drop In on your device. To answer the call, say "Alexa, answer". To deny the call, say "Alexa, ignore".